



XHAUST Download program Manual



@Xhaust_official



Xhaust official



www.xhaust.kr



Xhaust

Contents

Needs

5 items to prepare 1

Sequence

Flowchart 2

Connect Module and PC

Module & PC 3

APP Area

Launch App 4

Logout and Re-Login 5

PC Area

Download program 6-8

USB driver installation 9-12

Launch Downloader 13-14

Contents

Download Program

Sound update 15-18

Firmware update 19-21

PC disconnect

Check for updates 22

Help

Error executing Download Program 23

Download Program login error 24

Sound update error 25

Firmware update error 26



Needs

When using the download program, the following items are required.
It is advisable to prepare in advance.



1 Module

This is the XHAUST module.
If installed in the vehicle, it must be removed and prepared.
* For the location of the module, contact the installation shop.



2 USB cable

This is a USB A / USB mini-B type cable.
It is enclosed when purchasing the product.



3 Windows 7 and later operating system desktop

You need a Windows 7 or higher operating system and a computer(laptop) with Internet support. It is also possible in WIFI environment.



4 DLP download program & USB driver program


There are DLP download program and USB driver program in the compressed file. You can download it from the homepage.
* Please refer to page 8.



 


5 XHAUST App and membership.

A smartphone or tablet with the XHAUST App installed is required.

Sequence

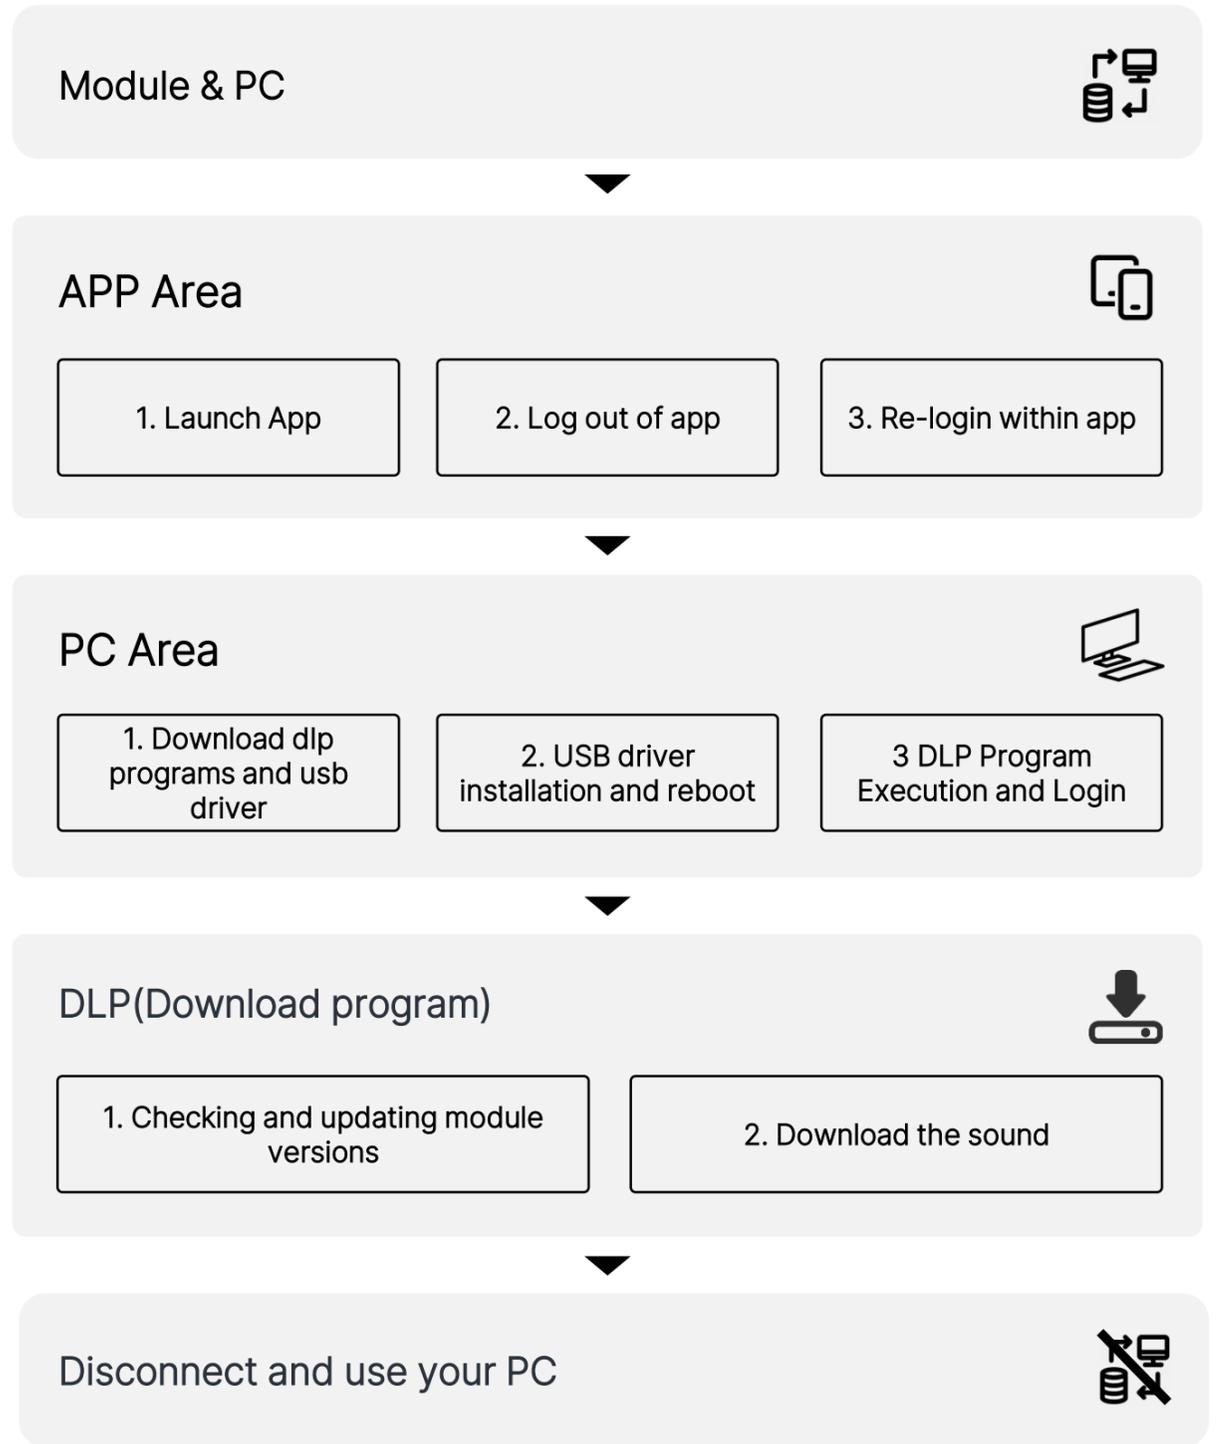


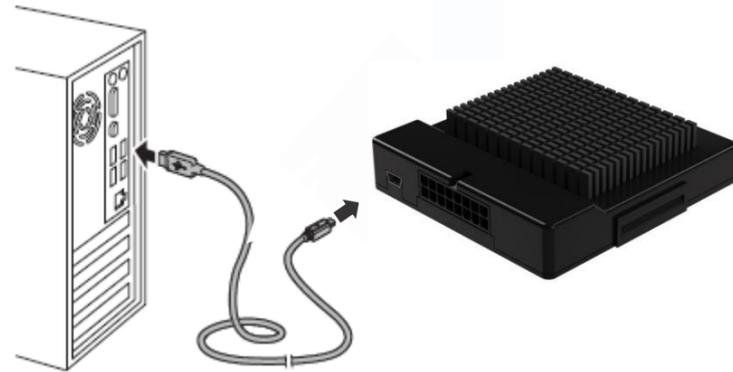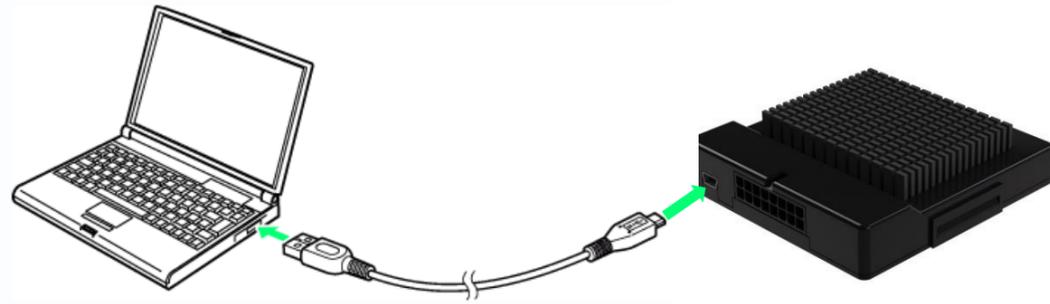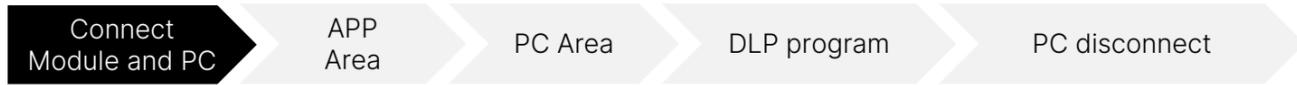


The type or performance of the PC is irrelevant if the following conditions are met.

- 1. Windows 7 and later operating systems
- 2. USB A type support
- 3. Internet-enabled


When you connect your PC with the module via USB, the module displays a green LED. The green LED is located close to the USB connector. A green LED means that power is connected. If the green LED does not turn on, you must use a different USB port or another computer.

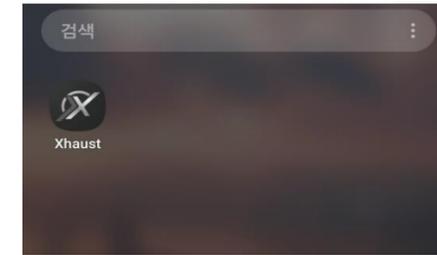

1. Run the APP on your mobile phone.

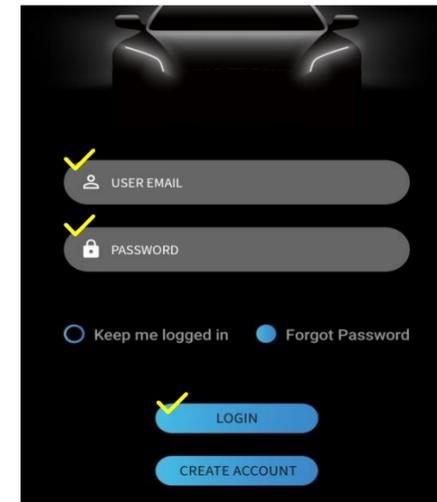


2. Enter your ID and password to log in.

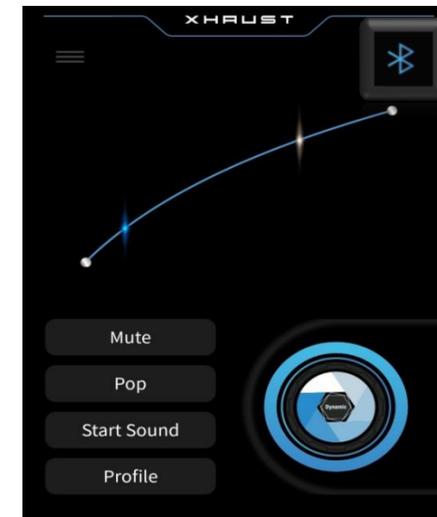


3. When paired properly, go to the main screen. Please check the Bluetooth connection mark.

APP Area > Logout and Re-Login

 
5

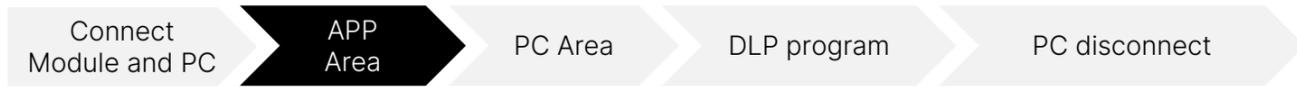

If the ID/PASSWORD input page is omitted because you are automatically logged in to the APP you are using, you must proceed once with manual login by canceling the automatic login and entering the ID & PASSWORD again.

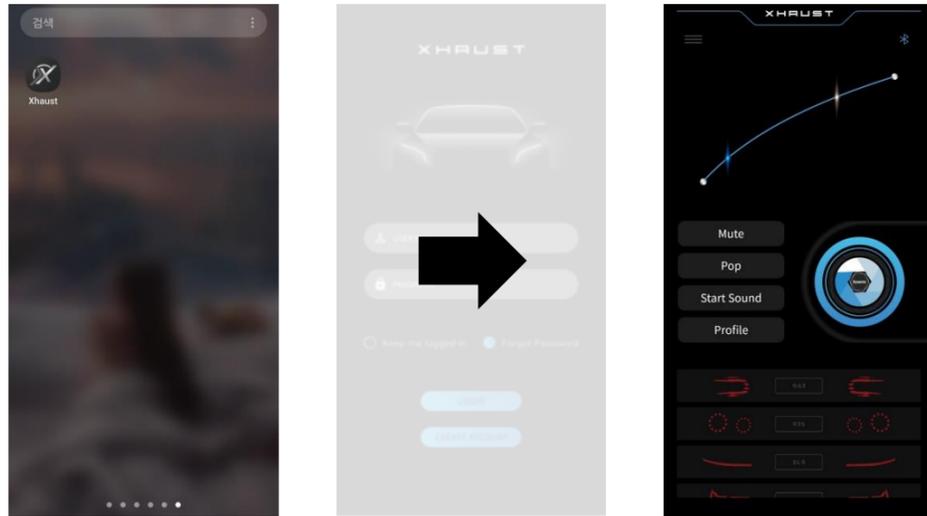

When running APP, if paired and immediately moved to the main page, take the following steps.

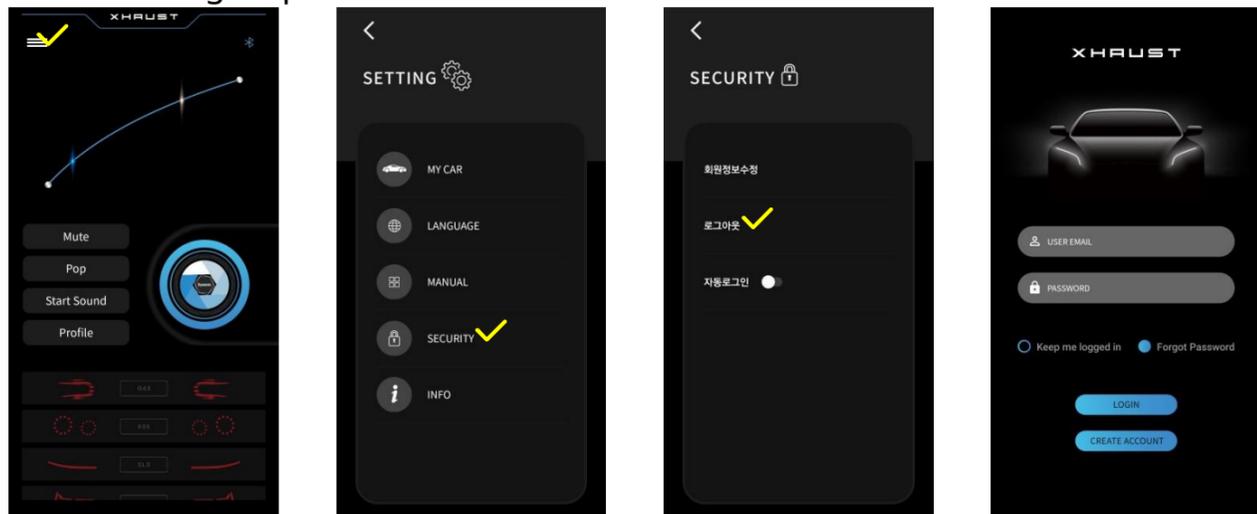

1. Click the Menu button to enter the Settings tab

2. Click 'SECURITY'

3. Click 'LOG OUT'

4. Log in to APP by entering ID&PASSWORD

PC Area > Download program

6



There are three main ways to download programs and drivers.

1. Download from Homepage

2. Download from the shared folder of JSR Performance

3. Contact HQ directly to get it




1. Download from Homepage

Shortcut Link

<https://www.teamxhaust.com/support/manual/>

1. Access the XHAUST homepage. (<http://www.teamxhaust.com>)
2. Go to the Support -> Library page on the top right bar of the homepage.
3. Click the DLP-Download program in the notice.
4. Download the attached XHAUST_DLPprogram_v1.0.10 zip below.

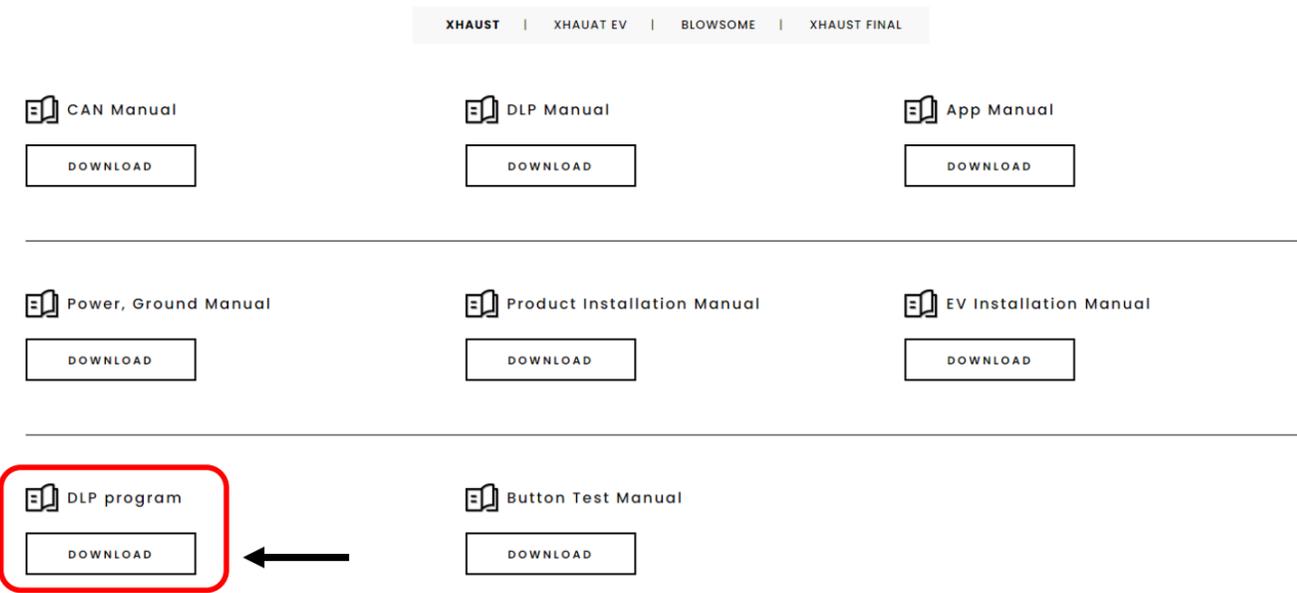


2. Download from the shared folder of JSR Performance

Shortcut Link

<http://naver.me/GKmf6fb>

1. Go to the link and download the ZIP file that was uploaded to the shared folder. (The shared folder is a space where you can share files on the network.)

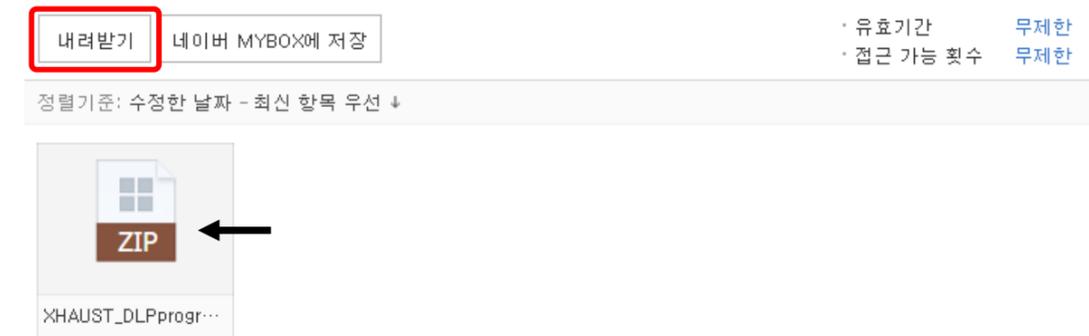


3. Contact HQ directly to get it

1. If you add a friend to the Kakao channel (XHAUST), we'll send it to you quickly.
2. If you contact us via email at jsrperformance@naver.com, we will check and send it to you.




Before you install this program, you must first check your computer's specifications. It may vary slightly by version of Windows, but can be found by entering Control Panel -> System.

WINDOWS 10

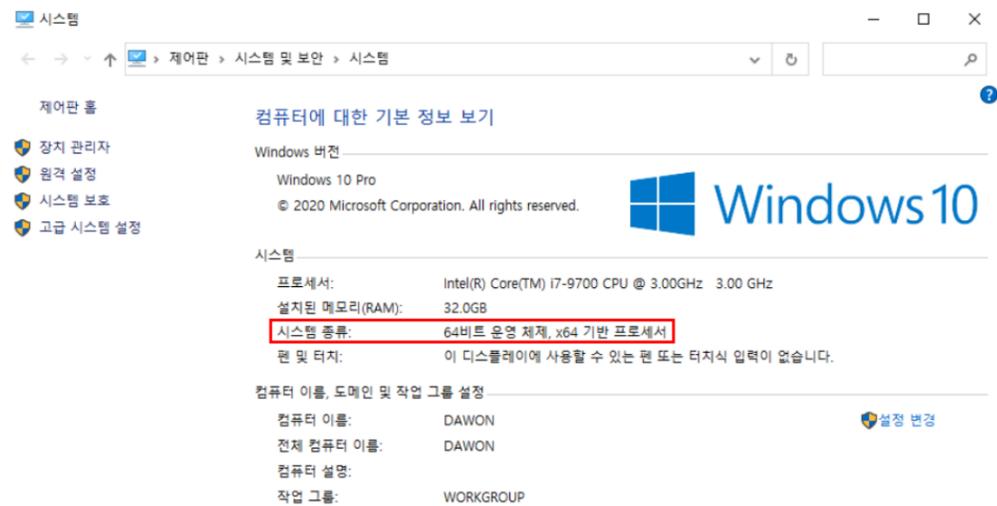

64-bit

WINDOWS 7

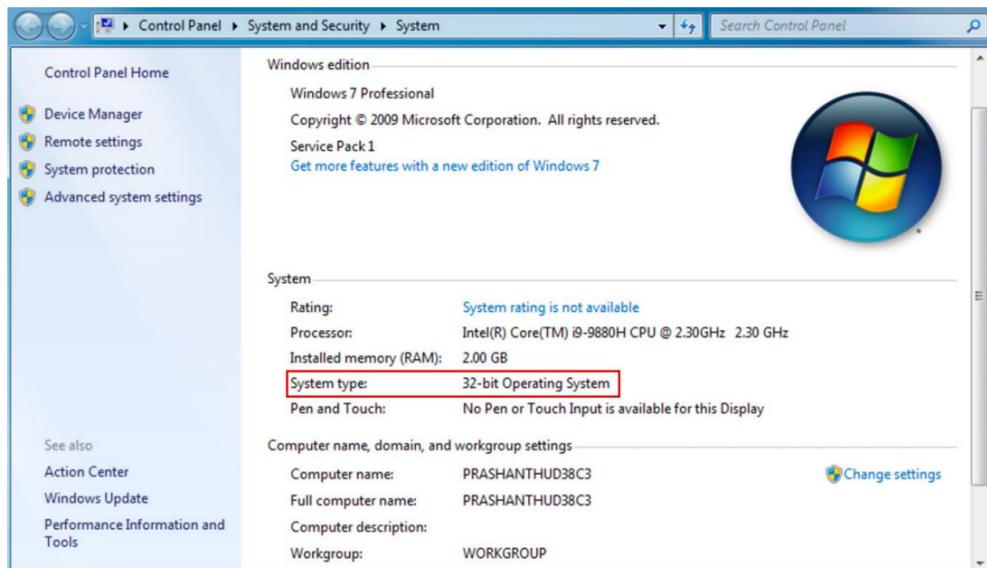

32-bit



If you have determined whether it is 32 bits or 64 bits, unzip the downloaded file.




When you unzip, you will see two or three files.






Driver installation method for using the MINIB USB connector.
 *Driver installation only needs to be carried out once upon initial connection.

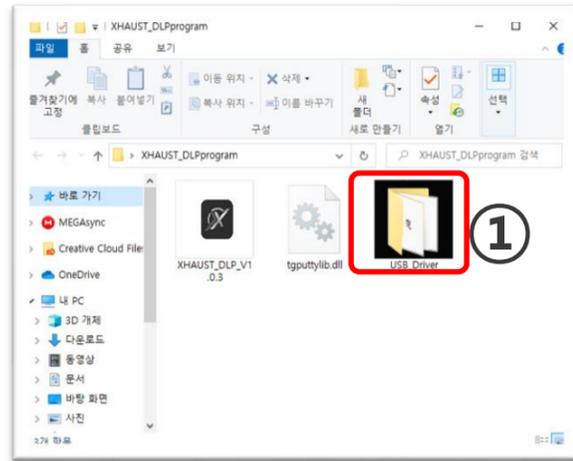

1. Launch folder 'USB_Driver'

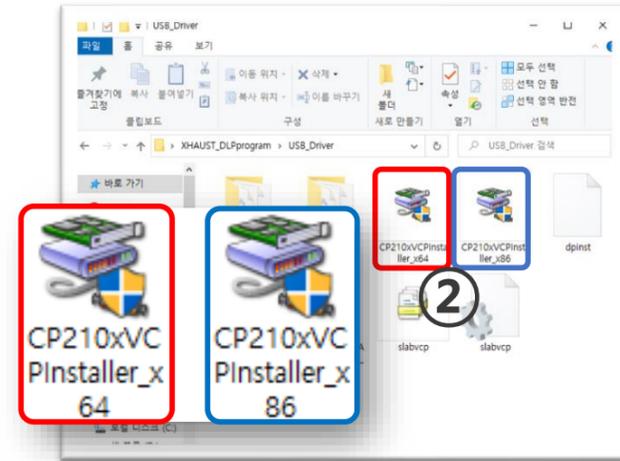

2. Run installation files that meet user WINDOW specifications (64bit or 32bit)



3. Click the Next (N) button



4. Check 'I agree (A)' and click 'Next (N)'




5. Check the driver status and click Finish



6. Reboot your computer after installation.




If the USB driver is installed normally, run the download program.

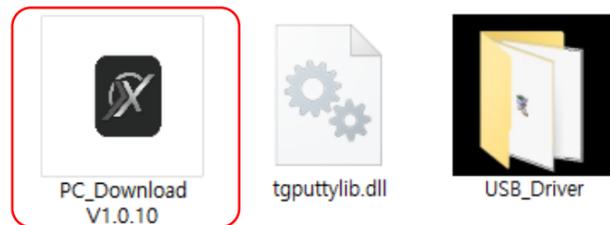

1




The login is in progress normally, and it takes about a minute.

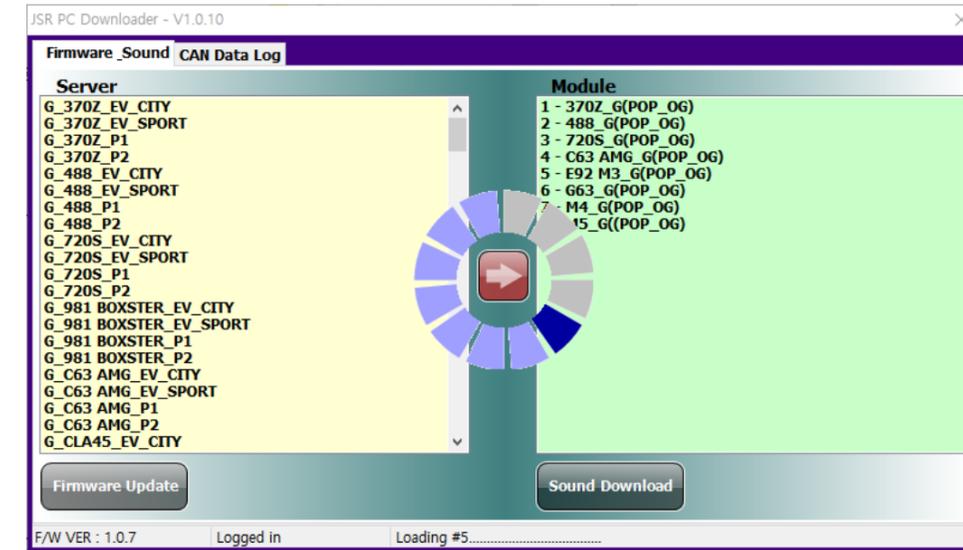


3

Fill in the ID (email address) and password used by the App, and click the OK button

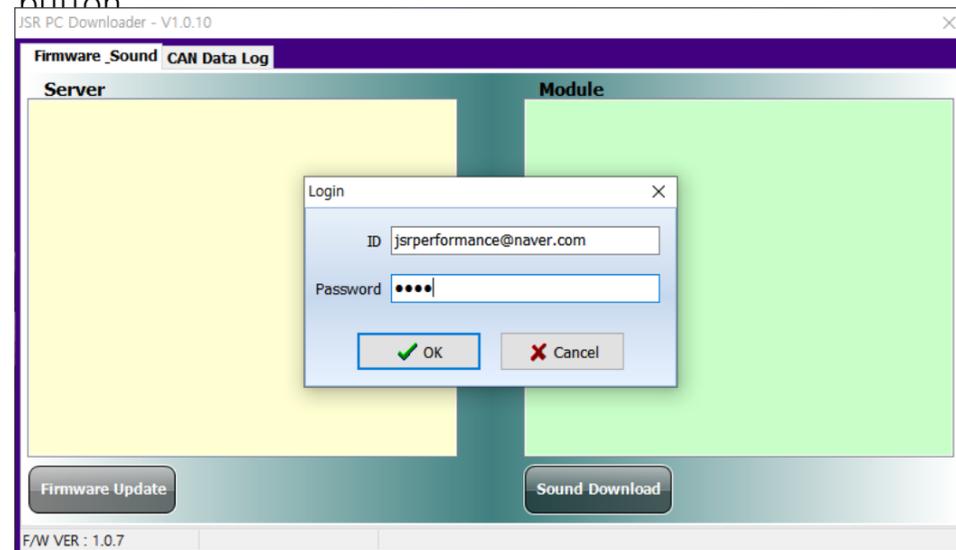

2

Login is complete.

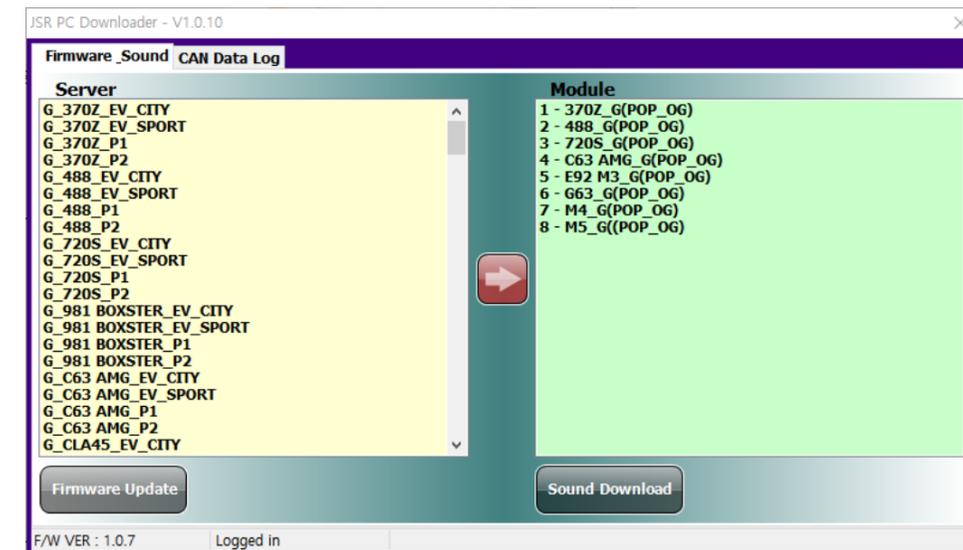

4




The DLP program has two main functions.

1. Download sound and update firmware
2. CAN Data Transfer

This manual will only cover sound downloads and firmware updates, and please refer to the dealer-only manual for CAN data transfer functions.

1. Download sound

It's easy to understand if you think about moving the sounds on the left (Server) to the right (Module).

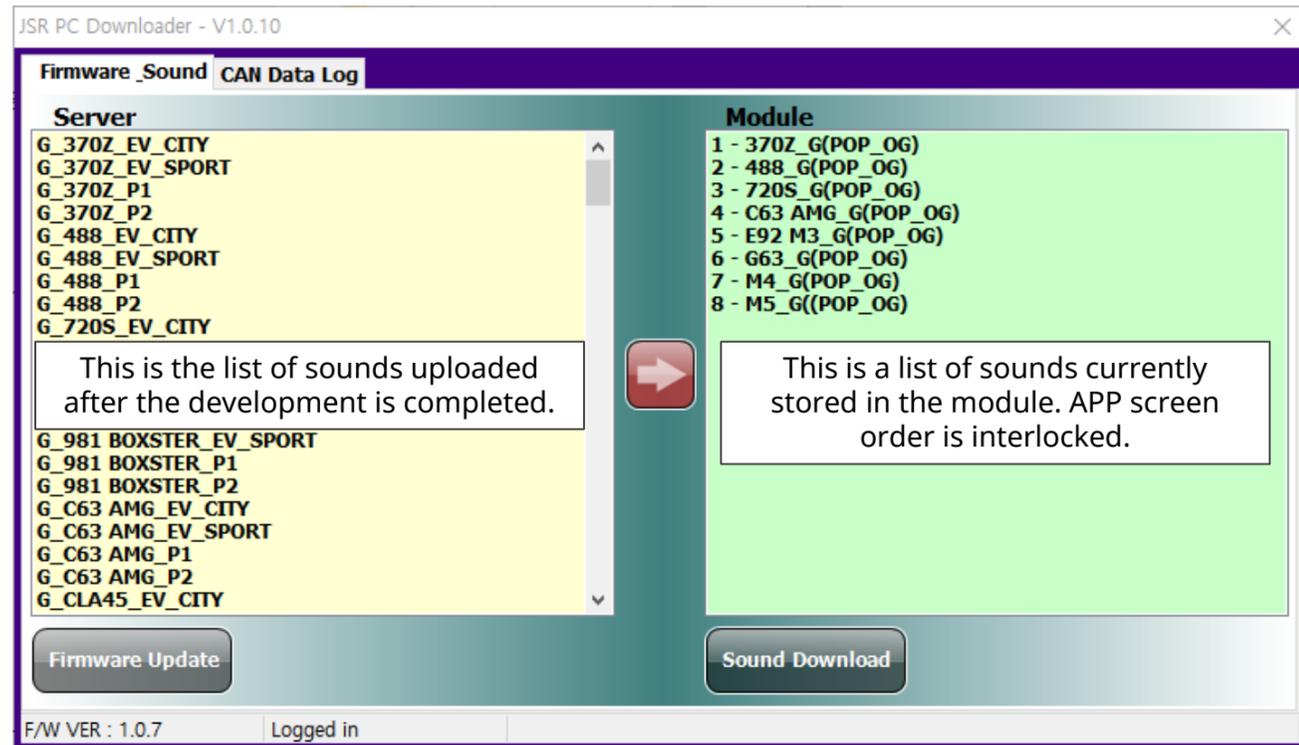

There are 6 files per sound. You need to find and insert a file suitable for the current vehicle's speaker installation situation.



- Hardware-specific notation- G / GC
- Sound Name - WRX SIT
- Pop&bang - P1 / P2
- EV Only - CITY (Comfortable driving mode) - SPORT(sport driving mode)

The hardware-specific notation is determined by the type and number of speakers.

G (Low-speaker)		I currently have one or two generators installed in my vehicle. = G
C (High-speaker)		One or two generators and one high-pitched speaker are installed. = GC

Popcorn (P) There are two types of sound.


P1 (POP1)	<ul style="list-style-type: none"> • Same as existing OG POP • high-pitched crackle • Recommended for high-pitched speaker setup 	P2 (POP2)	<ul style="list-style-type: none"> • Same as existing NEW POP • Low-pitched thumping heavy sound • Recommended for bass speaker setup
---------------------	---	---------------------	--

There are two types of EV mode.

CITY	• Comfortable driving with RPM suitable for daily driving.
SPORT	• It is a setting value suitable for sporty driving with a high RPM-oriented exhaust sound.




- 1 In the list of servers, click the sound you want to download.
- 2 Select a sound location from the module list (sounds from the original location will be deleted).
- 3 'Click' the Go button to move the sound list

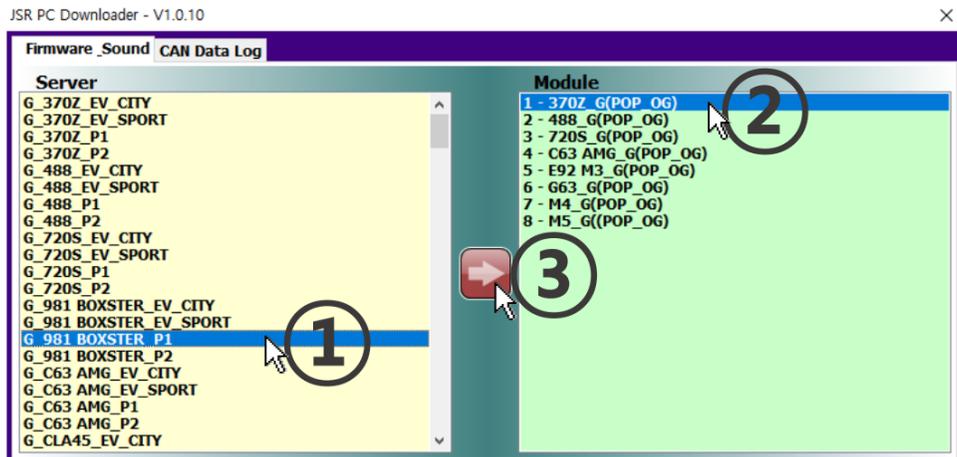

1

3


1 sound has been moved from server to module.

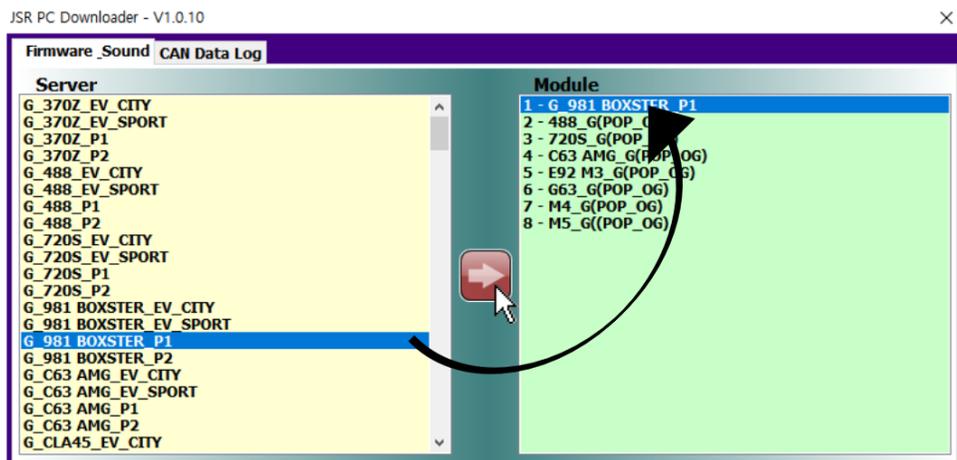

2




Move the list of sounds you want to download in the same way. Press the 'Sound Download' button to download the sound.

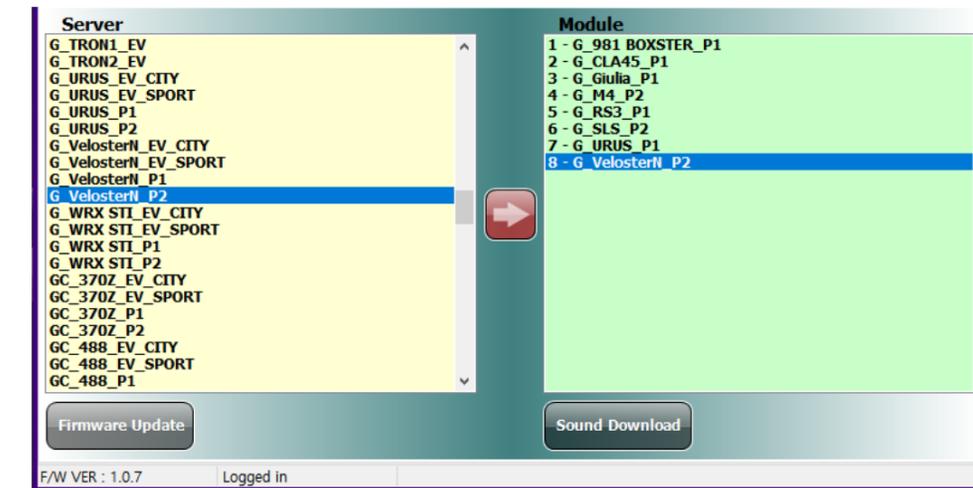

Sound downloading is in progress and will take about a minute.


You can check the status of the load and status bar to see what happens. If there is no response, you must exit the program and force it to proceed again.

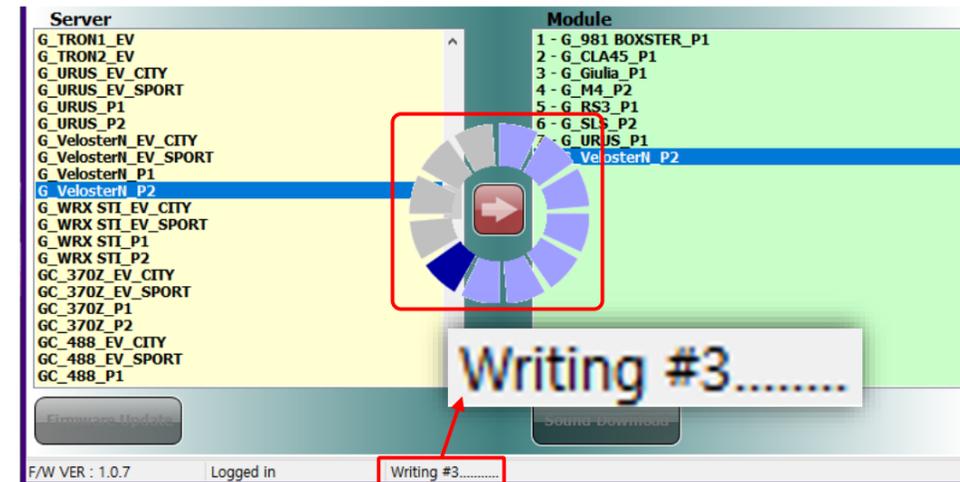

4




This is a download complete message. The sound update is complete.

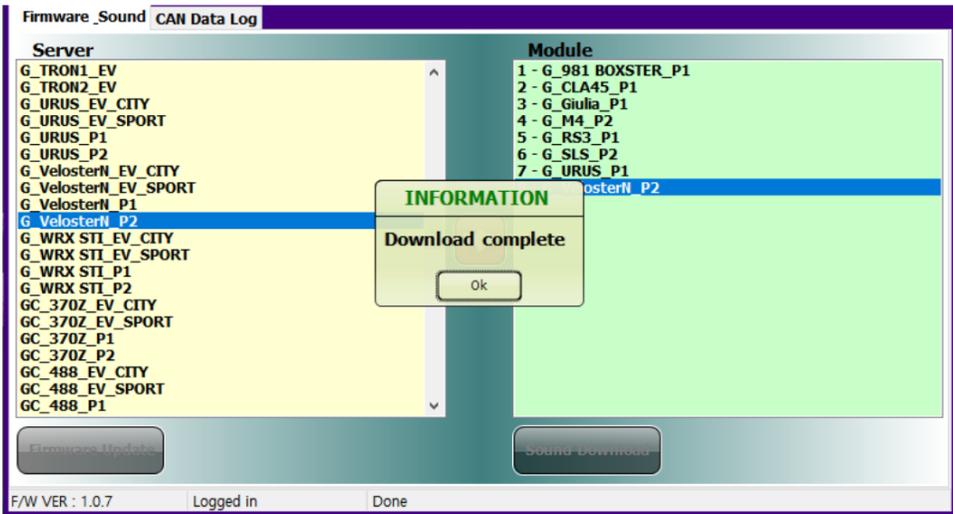


2. Firmware update


You can check the firmware version of the current module in the status bar below. Click the 'Firmware Update' button at the bottom left.

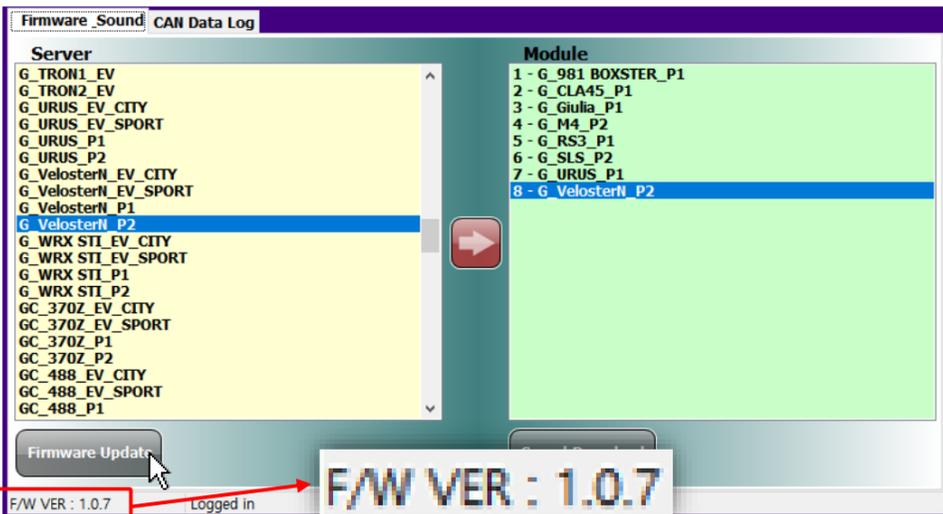

Select the latest firmware (①) in the selection window, and click the 'OK' button(②) to proceed with the firmware update.

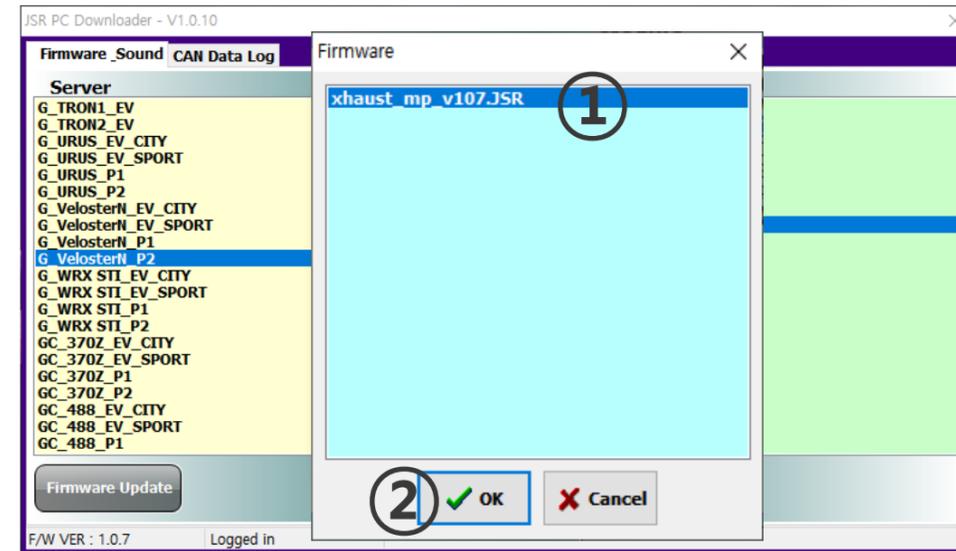


The password is the same as the firmware version number.
xhaust mp v107.JSR -> password is '107'

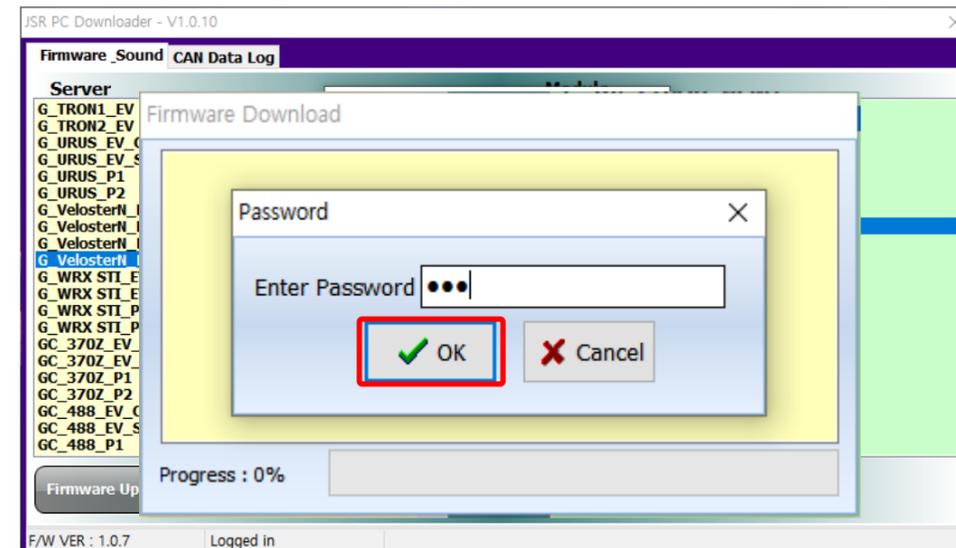

DLP program > Firmware update




Firmware update is in progress and will take about 30 seconds.
 (Never disconnect the module during the update. A fatal flaw occurs. No warranty)

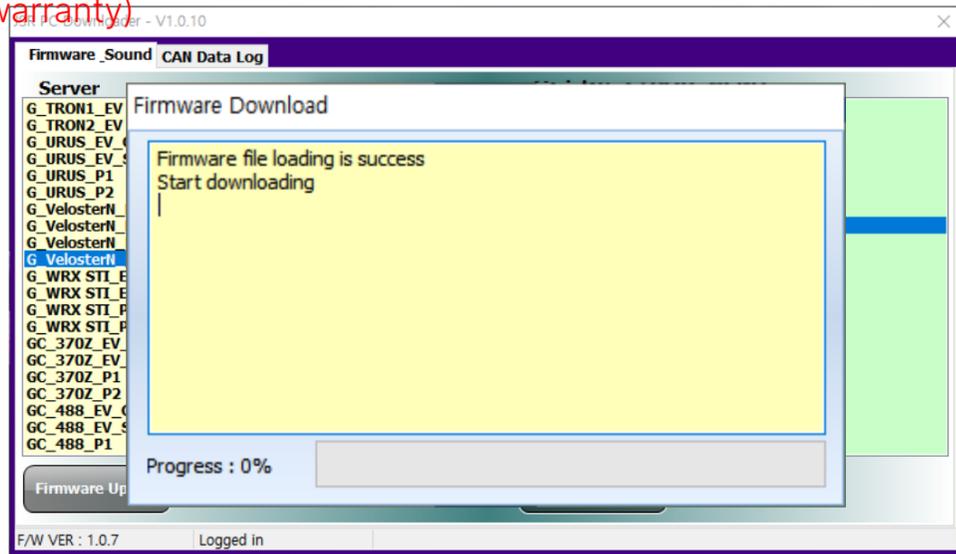


4

This is a download complete message. Firmware update has been completed.

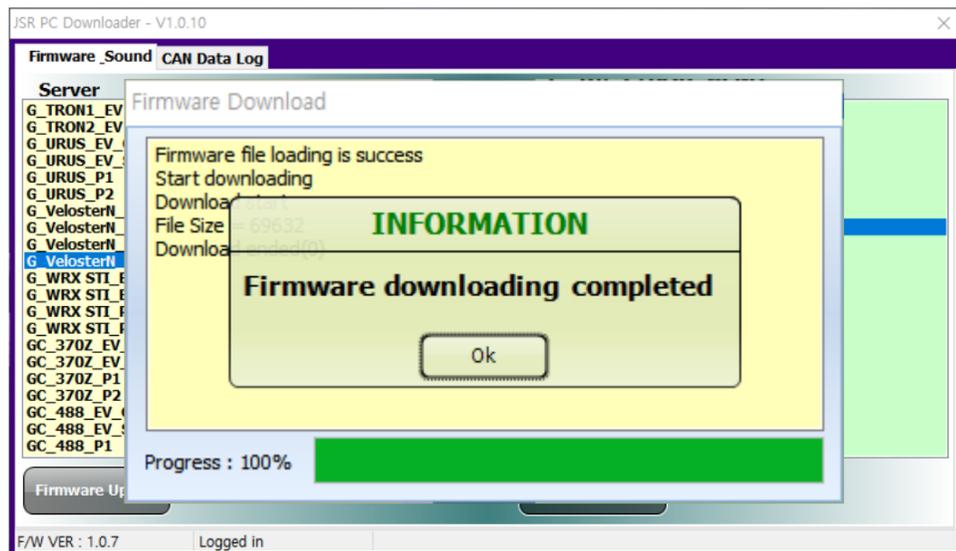


5

 
Disconnect and use your PC

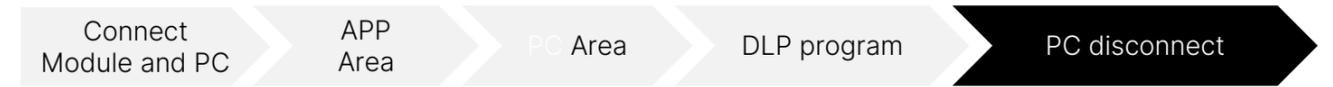

Run the app before disconnecting the PC and module to verify that the sound list has changed.

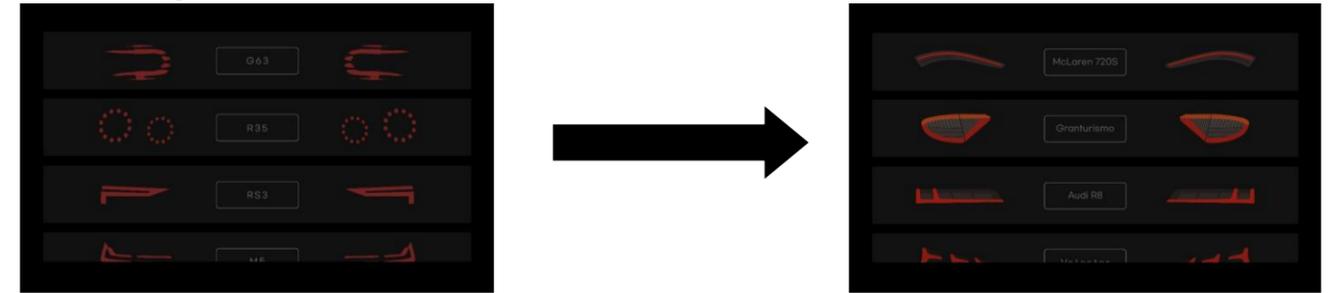

If there is no change in the sound list, press the Bluetooth icon in the upper right corner of the APP to disconnect the Bluetooth connection, force the application to exit and re-run the APP.

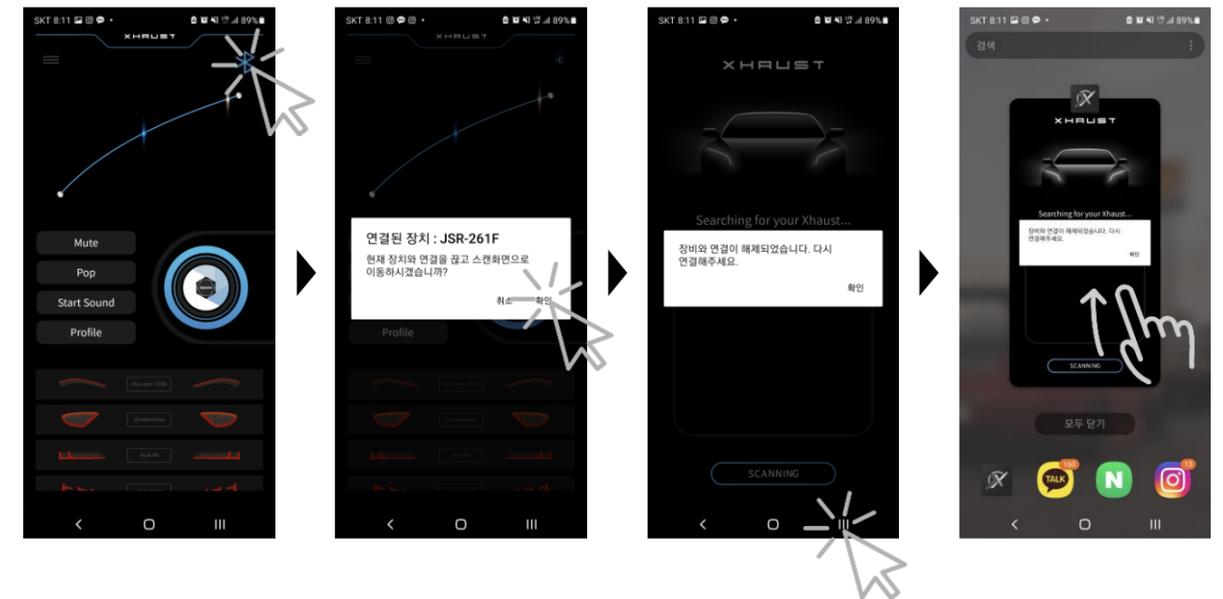

Disconnect the module and install it on the vehicle for use.

 
An error message that appears when the device is not connected properly. Connect the PC and module using the USB A/USB mini-B type cable included in the product.



This is an error message when the USB driver is not installed properly. To access the XHAUST download program, you must install a USB driver.



If the program does not run, the <The DLL "SHCORE.DLL" cannot be loaded> syntax appears. The desktop might not be a Windows 7 or later operating system. Please contact the head office.

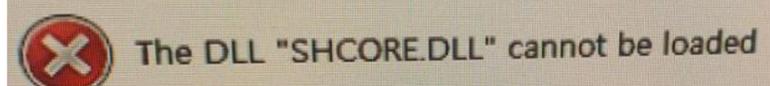


Message that occurs when an ID or password is entered incorrectly. There are two ways to take action when this message occurs.

- Check ID/PW and re-enter
- Re-enter APP after manual login (see 5P)


Please log in again with the above two methods.



This is an example of an error because the file uploaded to the server and the file in the module did not match. It will be solved if you re-download it as a new file on the server.

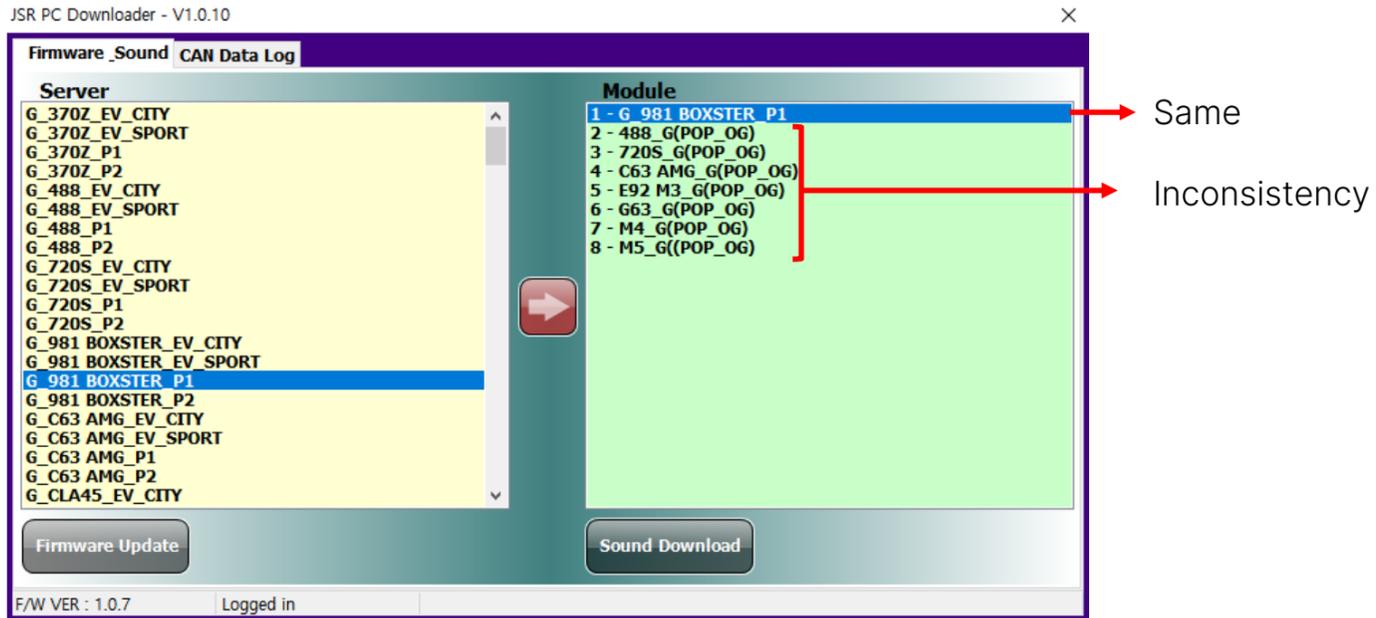


Re-download has been completed as a new file on the server.

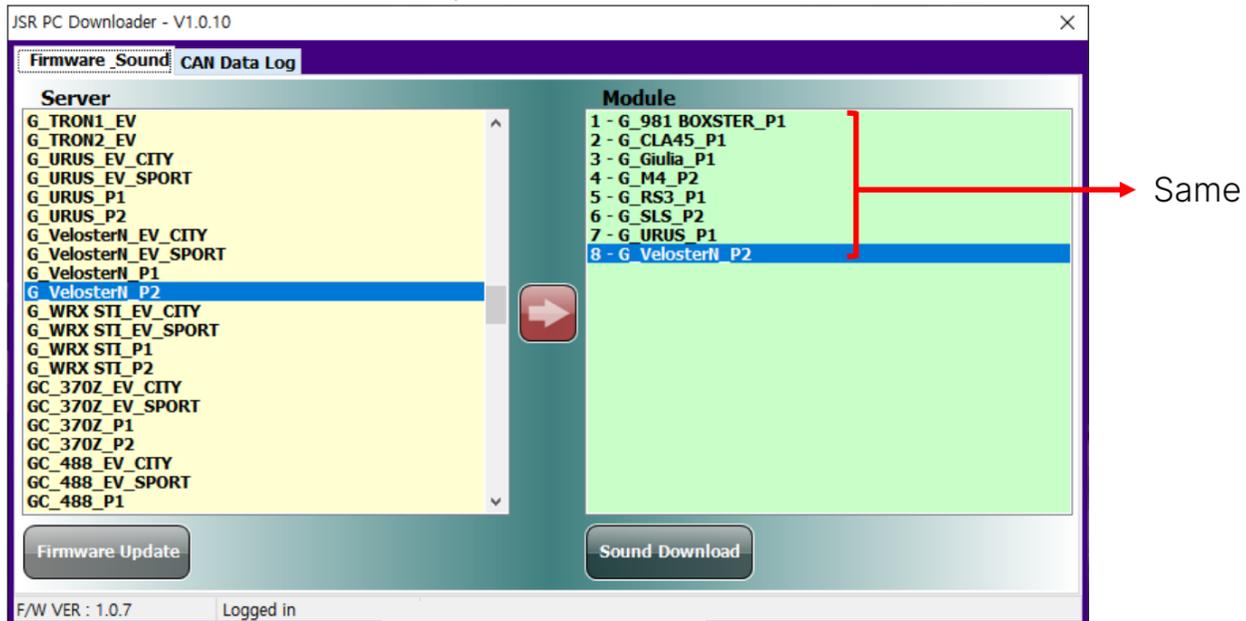

This message occurs when the firmware password is entered incorrectly. For the password, enter the version information for the latest firmware name.

xhaust mp v107JSR -> password is '107'

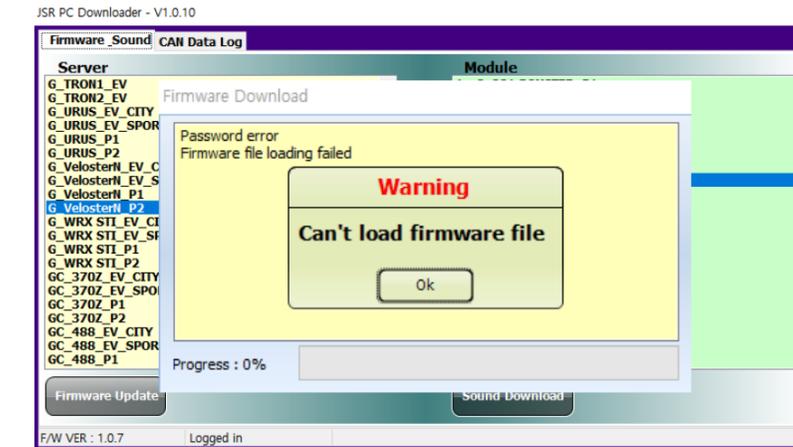

*** CAUTION - If the module is disconnected during the update, the module may no longer be available.**

- Symptoms of module disconnection during update.
- The bar in the update window doesn't move.
 - No connection after DLP re-run ("Device not found" message occurs.)

If the above problem occurs, the parts need to be replaced. Part replacement costs a certain part replacement cost.

Thank you.



@Xhaust_official



Xhaust official



www.xhaust.kr



Xhaust

